


## Kickpanel Installation Recommendations "A" Bodies Including '64 - '72

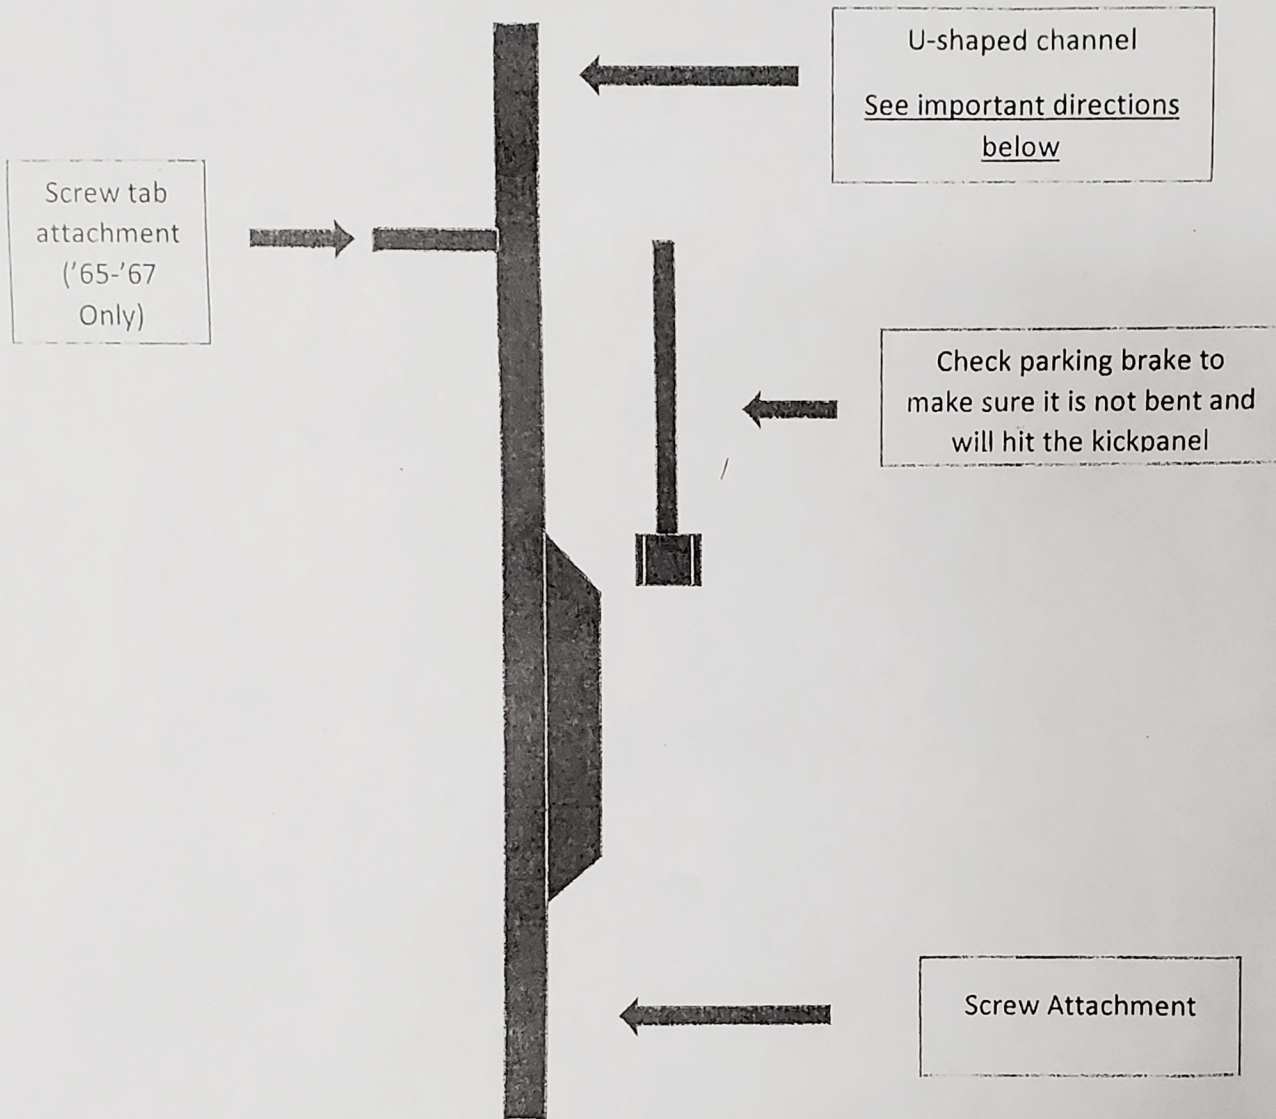

Driver side speaker only clears emergency brake pedal, if kickpanel is installed inside all carpeting, etc. and retaining screw is utilized (forward lower side) on '64 only. The top of the U-shaped channel must be trimmed to match the end of the existing trim on the vehicle. In some vehicles an additional attachment screw may be necessary to pull in kickpanel for brake pedal clearance

[www.customautosoundmfg.com](http://www.customautosoundmfg.com)

800-888-8637